 


SHARDOR

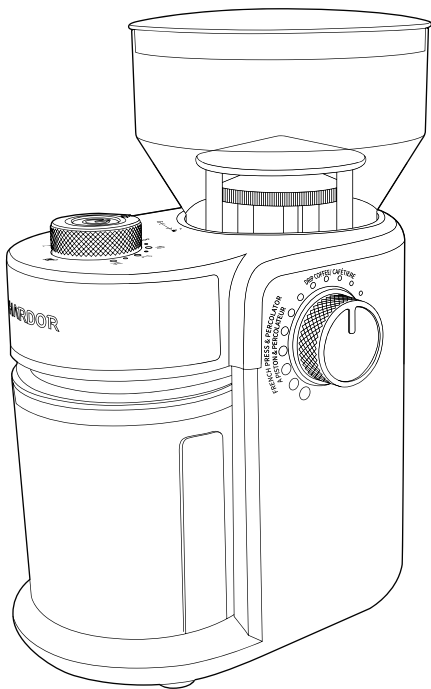

CG835B | Coffee Grinder

USER MANUAL

CONTENTS

■ Important Safety Instructions	1
■ Parts Identification	2
■ Specification	3
■ Assembly	3
■ Operation	4
■ Care and Maintenance	4
■ Disposal	5
■ Warranty	5
■ Customer Service	6

Important Safety Instructions

Basic safety precautions should always be followed when using electrical products, especially when children around, including the following. Read all instructions carefully before using this product.

1. To avoid the risk of electrical shock, always make sure the product is unplugged from the electrical outlet before relocating, servicing, or cleaning it.
2. Do not use this appliance for other than its intended use.
3. Keep the product out of the reach of children.
4. This product is not intended to use by children.
5. Do not leave the product unattended during use.
6. Always unplug the product from the electrical outlet when not in use.
7. Always place the product on a flat, steady, stable surface.
8. Keep the Power Cord and product away from hot surfaces.
9. Do not place this product in or expose it to water or other liquids.
10. The use of attachments not recommended or sold by the manufacturer may cause fire electric shock or injury.
11. To avoid the risk of serious personal injury or damage to the product, keep hands, hair, clothing, and utensils away from the grinding wheels, whilst operating the product.
12. Plug the product into a matching AC electrical outlet.
13. Never plug in the product into an electrical outlet unless it is completely assembled and the Lid is securely in place.
14. Before removing the Lid, unplug the product from the electrical outlet, and make sure the grinding wheels have stopped. Do not plug or unplug the product into/from the electrical outlet with wet hands.
15. When unplugging the product, be sure to grasp the plug, not the power cord. Pulling the power cord directly may cause damage.
16. Unplug the product from the electrical outlet before removing any parts.
17. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.
18. This product is intended for indoor, non-commercial, household use only.

Parts Identification

 
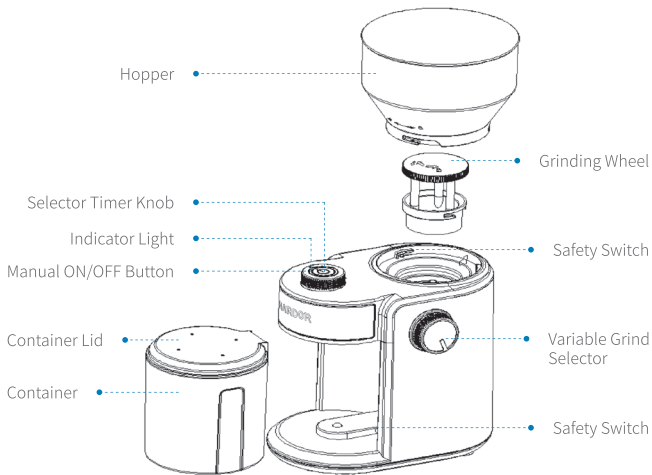 


Figure A

 


Figure B

Figure A:

Dose/time switch and power control button.

A: is the dose/time switch, which ranges from 2 to 14 cups

B: is the power indicator

C: is the on/off button

Figure B:

Grinding selector (grinding thickness levels for each main type of coffee to suit personal taste) : French Press, Percolator, Drip Coffee, Espresso, Turkish Coffee.

Specification

Model	CG835B
Power Supply	120V, 60HZ
Power	150W
Net Weight	1.2kg
Dimension	7*5*9inch

Assembly

Before using the coffee grinder for the first time, thoroughly clean the Lid, the Hopper, the Motor Housing, the Container Lid, and the Container (Reference the "Care and Maintenance" section): then completely dry them.

Remove any foreign objects or debris from the Container and Hopper before use.

1. Securely attach the Hopper onto the Motor Housing.
2. Pour the coffee beans into the Hopper.
3. Securely fit the Lid to the hopper.

NOTE

1. The Hopper has a capacity of 240g-----8.82oz.
2. The Container has a capacity of 95g-----3.35oz.

Operation

1. Assemble the unit and, make sure the Hopper is clean.
2. Fill the Hopper with whole coffee beans.
3. Plug the product into the electrical outlet.
4. Set the variable grind selector to match the desired brew: Figure.B.
5. Turn the dose/time switch to the number of cups you wish to grind.
6. Press the on/off button to start grinding.
7. Unplug the product from the electrical outlet when the unit is not in use or left unattended.

Care and Maintenance

CAUTION

1. Ensure the product is unplugged from the electrical outlet before cleaning it.
2. Always clean the product immediately after each use.
3. Wash the Lid in warm, soapy water; then rinse and dry completely.
4. Wipe clean the inside of the Container and Motor Housing with a soft, damp cloth; then thoroughly dry them.
5. Do not immerse the Motor Housing into water or other liquids.
6. Do not use abrasive cleaners or scouring pads to clean the product.
7. Do not sharpen the grinding wheel or apply oil on it.
8. Store the product in a cool, dry place.

Disposal

This product should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, you should recycle it responsibly to promote the sustainable reuse of material resources. Please use the return and collection systems or contact the retailer where the product was purchased to dispose of your used product. They can take this product for environmentally safe recycling.

Warranty

Limited 12-month Warranty. We warrant this product against any defects that are due to faulty material or workmanship for the life of the product. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge.

Please contact us and attach the sales receipt with your name, address, phone number and order number. For contacting us, please see the Customer Service Section. We will be happy with your service.

This warranty does not cover products damaged by the following:

1. Accident, misuse, abuse or alteration of the product.
2. Servicing by unauthorized persons.
3. Use with unauthorized accessories.
4. Connecting it to incorrect current and voltage.
5. Wrapping cord around appliance causing premature wear and breakage.
6. Any other conditions beyond our control.

Customer Service

For FAQ and more information, please contact us. We are glad to assist you.

After-sale Email: warranty@shardor1.com