 


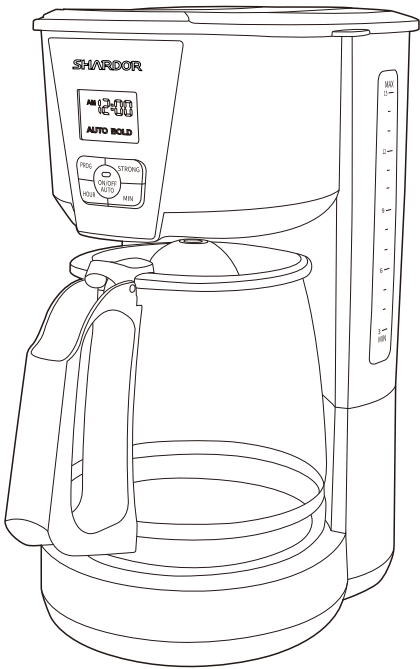

CM515B | Coffee Maker

USER MANUAL

Important Safeguards


When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and/or personal injury.

- 1. Read all instructions.
- 2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
- 3. Do not immerse appliance, cord or plug in water or other liquid.
- 4. Unplug from outlet when not in use and before cleaning.
- 5. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
- 6. Do not let cord hang over edge of table or counter, or touch hot surface.
- 7. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
- 8. Do not use appliance for other than intended use and place it in a dry environment.
- 9. The appliance can not be operated by children.

Specification

Model	CM515B
Item Weight	560g
Dimensions	312mm*216mm*356mm
Capacity	1.8L

Parts Identification

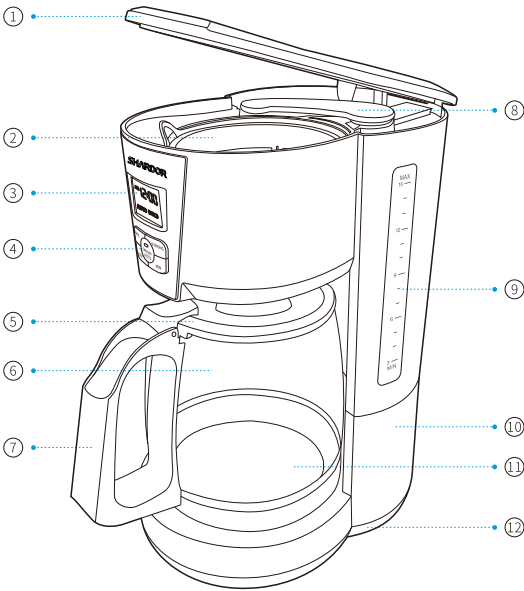

- ① Funnel Cover

④ Setting Button

⑦ Handle

⑩ Water Tank
- ② Fliter Tank

⑤ Lid Cover

⑧ Spout

⑪ Warming Plate
- ③ LCD

⑥ Coffee Pot

⑨ Water Window

⑫ Bottom Cover

Function Declaration

SHARDOR Programmable Coffee Maker can work in three mode, standby mode, normal mode and programmable mode.
Standby Mode: when plugging in the power supply, it work in standby mode. You can calibrate the time of coffee maker to local time, or adjust to normal mode.
Normal Mode: brew hot coffee.
Programmable Mode: program the 24-hour auto brew, so you can wake up to a fresh pot of coffee.

Standby Mode

After plugging in the power supply, the coffee machine defaults to standby mode. The LCD will display AM 12:00(0:00 a.m), and indicator is out.



Normal Mode

If the coffee machine is currently in standby mode, the following settings are required to enter Normal Mode:

- 1. Press the ON/OFF/AUTO key once, and the indicator become to red.



Note:

If in Programmable Mode, you can enter normal mode by pressing the ON/OFF/ AUTO key twice.


Two main function in Normal mode:

- 1. Sneak-a-Cup Function: Under the normal working mode, a proper amount of water can be added to water tank at any time. As long as there is water in the tank, SHAROR coffee maker continuously heats the water, and injects hot water into the filter tank to fuse with coffee powder. The coffee in the filter tank slowly drips into the coffee pot. If the coffee pot is removed from the base, the coffee in the filter will not continue to drip down. Once the coffee pot is restored to the base, the coffee in the filter continues to drip down.
- 2. Keep Hot Function: If the water in water tank is used up, the coffee maker heats the coffee pot to keep the coffee warm for about 2 hours. After 2 hours, the red indicator lights out, representing the coffee machine working in standby mode.

Programmable Mode

If the coffee machine is currently in stand-by mode, the following settings are required to enter Programmable Mode:

1. Press the HOUR and MIN keys to calibrate the time of coffee maker to local time, and the LCD will display the modified Hour and Minute.
2. Press PROG key to set scheduled time. LCD will flicker AUTO, indicating the status of setting the scheduled time.
3. Then press the HOUR and MIN keys to modify the brewing time. The scheduled hour and minute will be displayed on the LCD accordingly, you can confirm the time by pressing PROG key.
4. After the modification, press PROG again, and the scheduled time will take effect.
5. Press ON/OFF/AUTO until the indicator turns green and the LCD displays AUTO.
6. When the scheduled time comes, the light turns red and coffee maker starts brewing.

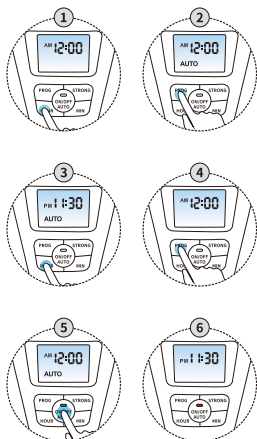


Note:

1. Time range: AM: 12-1-2-3-4-5-6-7-8-9-10-11, representing 0 to 11 am, PM: 12-1-2-3-4-5-6-7-8-9-10-11 representing 0 to 11 pm. For example AM 12:12 in LCD means 0:12 am.
2. If it is in normal mode, it can enter Programmable Mode by pressing ON/OFF/AUTO key once, indicator can be changed from red to green.
3. Local time and scheduled time can also be set in automatic mode, referring to steps (2) and (3) above.

Setting Coffee strength

In any mode of the coffee machine, you can set strong coffee by press STRONG key. If you do not want to brew strong coffee, press STRONG key again. BOLD on LCD indicate coffee maker brewing strong coffee.

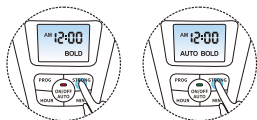

Caution

1. The electrical voltage must correspond with the voltage stated on the label on the bottom of the appliance.
2. Use only cold water!
3. Ensure the carafe is placed properly in its position when brewing coffee.
4. Between brewing processes switch off the appliance and let it cool down for about 5 minutes. Then refill with cold water.
5. After the brewing process, always switch off the appliance.
6. Disconnect the appliance before cleaning.
7. Keep the appliance out of reach of children.
8. To switch off the appliance use the On/Off switch.
9. The control lamp going out indicates when the machine is off.
10. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. The appliance must not be immersed.
13. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments
 - Farm houses
 - By clients in hotels, motels and other residential type environments
 - Bed and breakfast type environments

Cleaning and Maintenance

1. Disconnect the appliance.
2. Never immerse the appliance in water.
3. Clean the appliance with a damp cloth only.
4. The carafe can be cleaned with warm water, some washing-up liquid and a soft brush.

Disposal

• Note

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

The Warranty Do Not Cover

1. If the above points have not been observed.
2. If the appliance has not been properly maintained, if force has been used against it or if it has been damaged in any other way.
3. Errors or faults owing to defects in the distribution system.
4. If the appliance has been repaired or modified or changed in any way or by any person not properly authorized.

Customer Service

For FAQ and more information, Please contact us. We will be happy to your service.

After-sale Email: warranty@shardor1.com