## **SHARDOR**



EK515B | Electric Kettle

LISER MANUAL

# **CONTENTS**

Product Description · · · · · · 1
Specifications · · · · · · 1
Important Safety Instructions · · · · · 2
Before Using · · · · · · 3
Boiling the Water · · · · · 3
Using Your Kettle · · · · · · 4
Cleaning Electric Kettle · · · · · · · 4
Troubleshooting · · · · · · · 5
Warranty · · · · · 5
Customer Service · · · · · · · 5

### **Product Description**



## **Specifications**

Model	EK515B
Rating	120V / 60Hz
Power Consumption	1500W
Capacity	1.7 L
Unit Weight	2.4 lbs
Unit Dimension (Including Base)	9" x 6.3" x 10.6"

#### **Important Safety Instructions**

- 1. Using electrical equipment can be dangerous. Please read the instructions carefully before using.
- 2. The appliance is only to be used for the purposes described in these instructions.
- 3. Keep out of the reach of children. Close supervision is necessary when this appliance is to be used by or near children.
- 4. Do not disassemble or attempt to repair on your own. Please contact trained person for repair/service issues.
- 5. Use the appliance only on the voltage specified on the identification plate.
- 6. Use the handle to carry or move the unit, as the surface may be hot after use and to avoid scalding from hot liquid.
- 7. Never use the appliance in the open air.
- 8. Use only on a dry, anti-slip, level surface.
- 9. Do not fill above the MAX line; this may cause water to overflow, which may cause scalding.
- 10. Never switch on the appliance with its lid opening.
- 11. This appliance is only suitable for water, never put other liquids in the jug kettle.
- 12. Do not cover slits/holes in the area of the switch.
- 13. Do not use outside.
- 14. Descale the jug kettle regularly.

#### **Before Using**

Important: Please read the instructions carefully before using.

- 1. Completely unroll the cable.
- 2. Remove all packing material and stickers.
- 3. When the unit completes the boiling cycle, discard the water.

#### **Boiling the Water**

- 1. Fill the jug kettle with water. This can be done either by opening the lid or via the large spout.
- 2. Completely unroll the cable.
- 3. Place the kettle on base, ensuring that it is correctly engaged.
- 4. Connect cord to power. Warning: appliance becomes hot during using.
- 5. Switch the unit ON. The indicator lights up
- 6. The kettle will switch off automatically when water has come to a boil.
- 7. Water can be poured out with the lid on.
- 8. The kettle can easily be removed from its base.
- 9. The base remains close to the socket. After using, the kettle should be replaced on its base at once, and it is immediately ready for use again.
- 10. Heating can be stopped at any time by operating the switch.

#### **Using Your Kettle**

- 1. The appliance is only suitable for boiling water.
- 2. Do not use for any other liquids. The heating element must be covered with water 0.5L or above on gauge, otherwise there is danger of overheating.
- 3. Should the boil-dry protection operate, allow the kettle to cool down. The appliance will be ready for use automatically.
- 4. The water gauge will show you how much water you have put in the jug.
- 5. The kettle is only for standard use.
- 6. If the supply cord is damaged it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

### **Cleaning Electric Kettle**

- 1. Due to scale build up, it is best to de-scale your kettle weekly.
- 2. Before cleaning, unplug the appliance and allow it to cool down.
- 3. Wipe it inside and out with a soft cloth.
- 4. Cover the heating elements with vinegar and water (2/3 water, 1/3 vinegar).
- 5. Boil up the solution two or three times. Take care that it does not overheat.
- 6. Rinse clean and wipe with a soft cloth.
- 7. Do not immerse in any liquid.

#### **Troubleshooting**

Check the following things before E-mailing the customer service:

- 1. Is the unit switched to the ON position?
- 2. Is the plug firmly connected to the outlet?
- 3. Is the kettle seated properly on the base?
- 4. Has the kettle been accidentally switched on without water or allowed to boil dry? Please allow unit to cool down.
- 5. If the kettle heats but does not boil, please de-scale.

#### **Warranty**

Shardor Electric Stainless Steel Water Kettle is warrantied to the original owner for two years from the date of purchase for defects in material and workmanship under normal use and service. Shardor will not be liable for any damages, losses, or inconvenience caused by user negligence, abuse, or use that is not in accordance with this product manual.

#### **Customer Service**

For FAQ and more information, please contact us. We will be happy assist you.

After-sale Email: warranty@shardor1.com