 


SHARDOR

Share with you

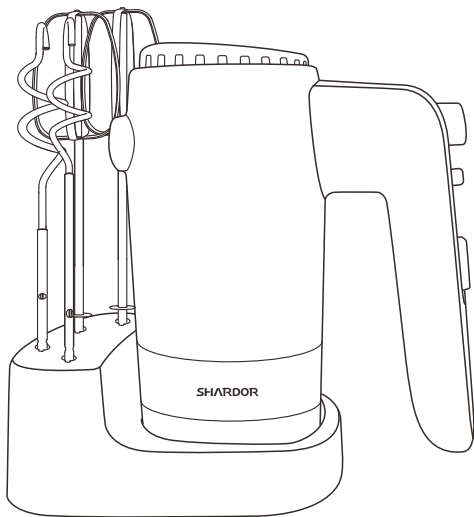

Hand Mixer

User manual

CONTENTS

■ Specifications	1
■ Product description	1
■ Speed parameter	2
■ Tips	2
■ Operation	3
■ Precaution	3
■ Warning	4

Specifications

Name	Model	Rated Voltage	Rated Frequency	Rated Power
Hand Mixer	HM226B	120V	60 HZ	300W

 
 
Product description

Speeds button

Turbo button

Eject button

Body

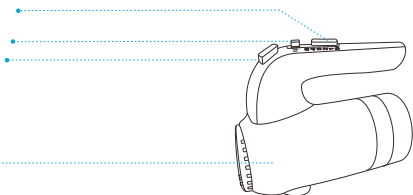

Beaters



Left dough hook



Right dough hook




Base

Speed parameter

TURBO I	Speed1	Speed2	Speed3	Speed4	Speed5
	654-885 RPM	782-1058 RPM	909-1230 RPM	1037-1403 RPM	1122-1518 RPM
TURBO II	Speed1	Speed2	Speed3	Speed4	Speed5
	739-1000 RPM	867-1173 RPM	994-1345 RPM	1079-1460 RPM	1164-1575 RPM


Tips

 - Install beaters or hooks into main engine

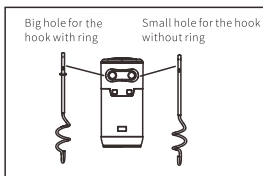

Note: Do not install the hooks in wrong holes.

- Make sure the speed button at "0" before plug on

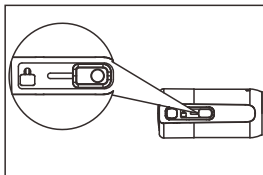











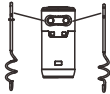
It should be allowed to cool down for 30 seconds after operated for 3 minutes

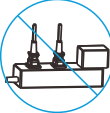Operation




- Collect all your ingredients together before starting. Choose a mixing bowl that has plenty of room for the mixture.
- Add the first ingredients to the mixing bowl. Set the Off/Speed switch to '0' (off).
- Plug the power cable into a mains outlet.
- Holding the mixer by the handle, place the beaters or dough hooks into the mixture and gradually increase the mixing speed in the range 1 to 5 until you reach the speed you want.
- Move the beaters around a little in the mixture to help it circulate. Keep the beaters immersed in the mixture at all times to avoid splashing the mixture from the spinning beaters.
- If you need to add ingredients or redistribute the mixture in the bowl, switch off the mixer first.

Precaution

PRECAUTION	
  <p>Do not use other power except 120V AC.</p>	 <p>Please use 6A socket single alone</p>
  <p>Hold the plug and plug in stably.</p>	  <p>Hold the plug and plug off stably</p>
 <p>Do not plug off by pulling the power cord</p>	 <p>Don't scratch the machine with anything hard</p>

 <p>Always pull out the plug after using the machine</p>	 <p>Hooks should be installed in the right holes.</p>
<p>It should be allowed to cool down for 30 seconds after operated for 3 minutes, which will help prolong the life of the product.</p>	<p>Beater and hook are not allowed to use together.</p>
<p>Before install or uninstall the beaters or hooks, please plug off and the speed button should be at "O" position.</p>	<p>Please use the accessories provided by our company</p>
<p>Before work, please make sure every part is installed or locked correctly and firm.</p>	

Warning

Warning	
<p>Any engine disassembly, repair should be executed by qualified technician.</p>	 <p>This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.</p>
 <p>Do not plug on/off with wet hands.</p>	 <p>Do not wet the appliance or put it into water.</p>
<p>Finger, clothes, fur or hair should be away from the rotating parts when the appliance is working.</p>	
<p>A beater and a hook are not allowed to used together.</p>	
<p>The appliance must be powered off before any assembly and disassembly.</p>	
<p>Make sure every part is firmly fixed before power on.</p>	
<p>If the wire or power cord is damaged, please sent the appliance to factory or service centre .</p>	
<p>This appliance is for household use only.</p>	
<p>Children shall not play with the appliance.</p>	

SHARDOR

Share with you



Changsha 8-oranges Network
Tech Co., Ltd.



warranty@shardor1.com